

DISINFECTANT TRACTOR MATS

2 Mats (1 metre x 6 metres each)

SKU: 120681

The Disinfectant Tractor Mats are designed to dispense disinfectant into the tyres of Tractors and to withstand the passage of Tractors in a day.

The mats are robust and equipped with fixings (Contents below) to allow deployment on good concrete or tarmac surfaces.

IT IS ESSENTIAL that in laying the mats that great attention is given to the following:

- The Mats require a firm Concrete or Tarmac surface
- The Mats should be positioned on a clean, even, FLAT surface
- The Mats must be anchored at all the fixing points STRICTLY ACCORDING TO THE INSTRUCTIONS BELOW
- Traffic must approach in a straight line and there should be no turning on the mats
- Traffic must be calmed to ensure no braking on the mats and a slow even progression over the mats.
- If there is a danger of drivers being tempted to drive over the Mats fast, it is advised that sleeping policemen are erected in front of the mats.

The Mats should be filled with 85 litres of disinfectant each (170 litres for the pair).

The Mats will hold the disinfectant with no run off except when vehicles pass over. Disinfectant levels should be topped up as required. In hot weather there may be some evaporation from the mats.

CONTENTS

1	TWIN TRACTOR MATS (marked 1 of 2 and 2 of 2 respectively)
4	BARS (900mm)
50	8 mm SCREWS, WASHERS AND RAWLFIXINGS
1	IMPACTOR BIT for hammer drill

INSTALLATION INSTRUCTIONS

1. CLEAN SURFACE CONCRETE OR TARMAC SURFACE ENSURING NO SHARP STONES UNDER THE MATS
2. LAY 2 MATS SIDE BY SIDE
3. POSITION SO BLACK ABSORBENT MATTING INSIDE EDGES IS 42 Inches (106 cm) APART (as per diagram 1).
4. FIX THE MAT BY THE FLAT IRON BARS AT EACH END OF THE MAT AS FOLLOWS:
 - 1) UNRAVEL MESH WITH FLAT IRON BAR IN
 - 2) POSITION FLAT IRON BAR OVER THE EYELETS IN MAT
 - 3) DRILL THE CONCRETE OR TARMAC SURFACE THROUGH THE BAR HOLES AND EYELETS
 - 4) LIFT MATTING AND CLEAN OUT HOLES
 - 5) CAREFULLY PLACE RAWLPLUGS IN HOLES PROTRUDING BY 10mm (Diagram 2)
 - 6) REPOSITION MATTING OVER RAWLPLUGGED HOLES (Diagram 3)
 - 7) REROLL NETTING AROUND THE FLAT IRON BAR
 - 8) SCREW DOWN THE BAR, NETTING AND MAT USING 5 SCREWS AND WASHERS
5. FIX 7 SCREWS PER MAT DOWN EACH SIDE OF THE MAT THROUGH THE EYE LETS.
6. FIX 7 SCREWS PER MAT DOWN THE CENTRE HOLES.

Use & Care

- 1 Mats must be anchored firmly to the floor, following the instructions above
- 2 Saturate grey matting with disinfectant (see quantities above)
- 3 Traffic must approach in a straight line and there should be no turning on the mats
- 4 Disinfectant levels to be topped up as required
 - *Note in hot weather there may be some evaporation*
- 5 Mats may be cleaned with low pressure water & wiped clean where necessary. Allow to dry before reapplying disinfectant

TWINA 1060

DIAGRAM 1

Metal Bars


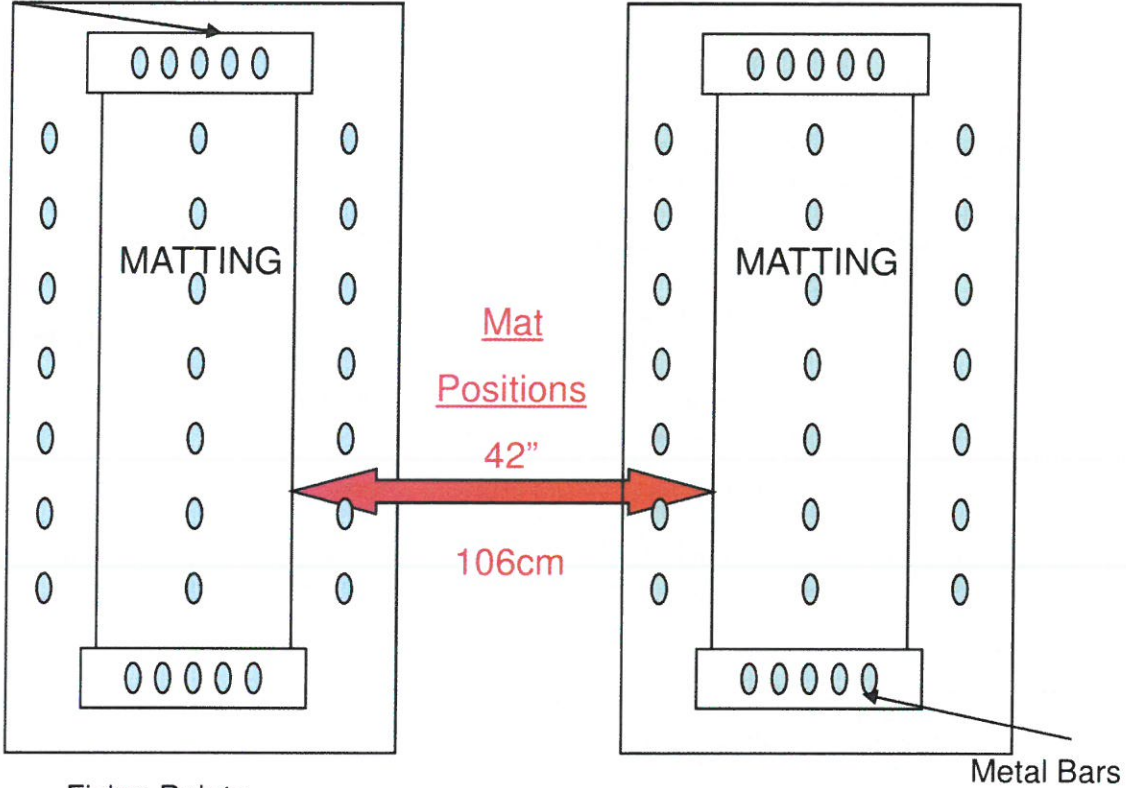


DIAGRAM 2



ENSURE RAWLPLUG
PROTRUDES BETWEEN
10/12MM ABOVE GROUND
SURFACE

DIAGRAM 3

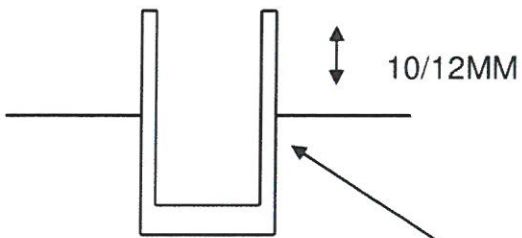