

# FootCHECK



FootCHECK is a pre-calibrated footbath providing a rapid, simple and convenient way to accurately and consistently achieve the correct concentration for disinfectants used as a part of a biosecurity programme.

- **REMEMBER:** Fill in your audit sticker and/or record sheet.


## How to use FootCHECK



1



2

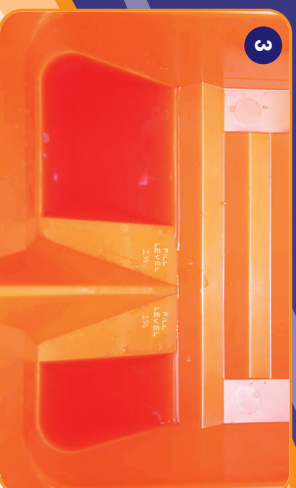

3



4

1 Position footbath on a level floor near a suitable wall. 2 On level ground, prop the bath against a wall to achieve an angle of 45 degrees (as illustrated) and lift the lid. 3 Carefully pour concentrated disinfectant into the appropriate internal measuring chamber, or chambers. Fill the 1% chamber for 1% concentration (half fill for 0.5% concentration). Fill the 2% chamber for 2% concentration or fill both 1% and 2% chambers for 3% concentration. For 4% concentration fill both 1% and 2% chambers (as per 3% concentration) - see point 5 for water level instructions. 4 Lower footbath so that the base is flat on the floor.



5



6



7



8


5 Fill footbath with clean water to final fill line (15 litres) or to level B fill line for 4% concentration (11.25 litres). Swirl bath contents to mix disinfectant. 6 Complete an audit sticker and apply to front of footbath in the space provided. 7 Keep lid closed when not in use to maintain efficacy by keeping contents clean, reducing evaporation or dilution. 8 Dispose of used contents responsibly and in accordance with the disinfectant instructions.




# FootCHECK



**IMPORTANT**  
Lid attachment and  
removal instructions

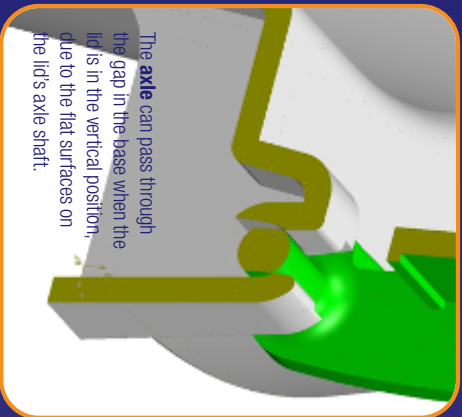

The **axle** can pass through the gap in the base when the lid is in the vertical position, due to the flat surfaces on the lid's axle shaft.

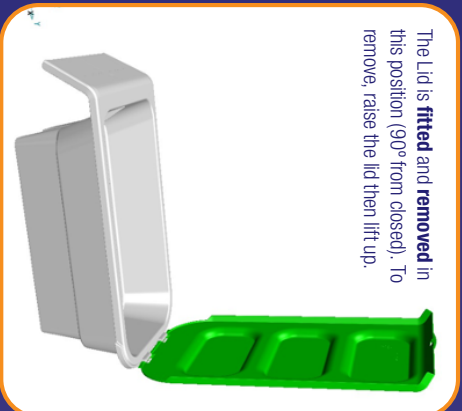

The Lid is **fitted and removed** in this position (90° from closed). To remove, raise the lid then lift up.

The hinge system is design to allow the lid to be removed. The lids 'axle' shafts have flat surfaces which allow them to lift and disengage from the base - when the lid is in the **VERTICAL** position as indicated.



Cording set for lid.



Audit label - attach to front panel of FootCHECK

FootCHECK  
www.FootCHECK.com - www.TheDuffCheck.com

Change frequency as applicable  
FootCHECK Location: %

Distributor used:

--	--	--	--